



Installation Instructions




Gather the trolley, triggers, hardware and included tools required for assembly.



Position the triggers in the semicircular holes on each side as shown.



Place the bolt through the holes in the triggers.

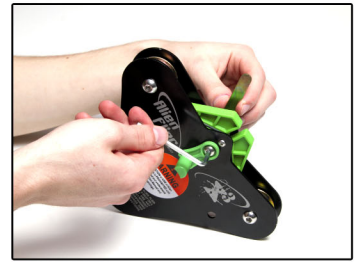


Screw the nut on, tightening with the wrench and Allen wrench provided.



Place the trolley with the assembled speed control on the line.



Insert a nylon spacer between the front and back frames as shown, then put the bolt through the trolley and spacer.

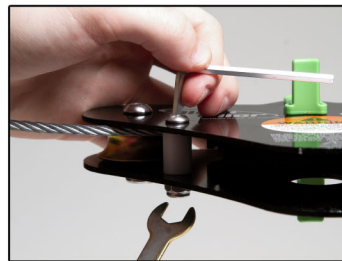

Screw the nut on, tightening with the wrench and Allen wrench provided. Repeat on the other side.



Insert tow rope in the hole on the side of the Pop N' Snap ring. Tie a knot to secure.



Remove the warning stickers covering the handle holes on the trolley. Take a moment to review all safety warnings and instructions. If you have any questions STOP and contact Alien Flier BEFORE completing installation!



Insert the Pop N' Snap ring in through the bottom of the trolley.



Depress the snap buttons and insert the handle into the trolley, pushing until the snap buttons come through the opposite side.



Your trolley is ready for use! Please refer to the directions included with your Stop Block to complete the installation. Do NOT use any zip line without a reliable and safe way to stop!